



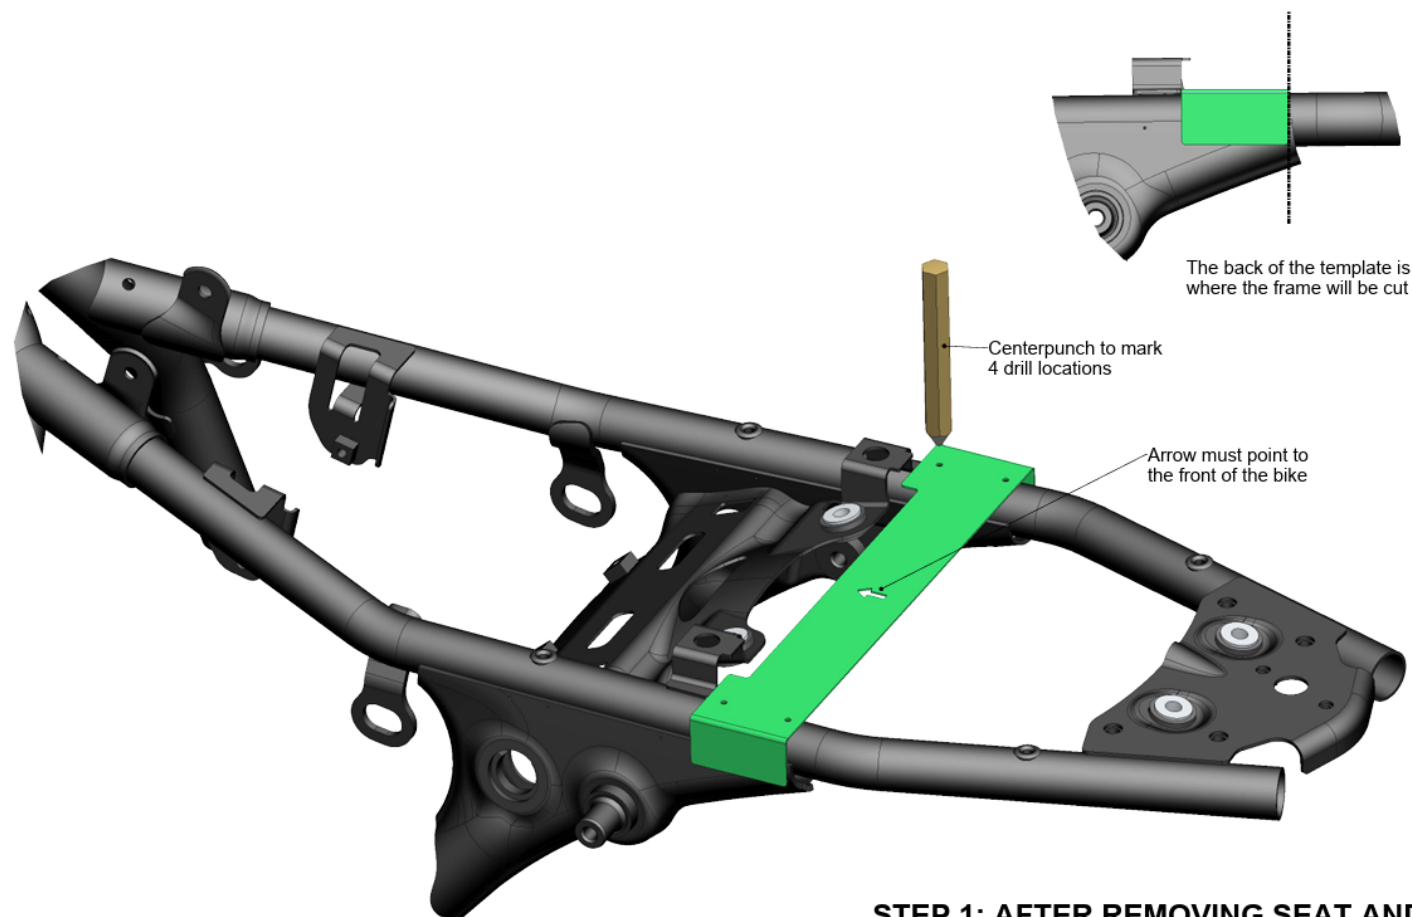


STEP 1: AFTER REMOVING SEAT AND FENDER, USE TEMPLATE TO MARK THE DRILL AND CUT LOCATIONS

STEP 2: CUT OFF SLIGHTLY LESS THEN NEEDED AND THEN CLEAN UP CUT. TESTFIT NEW REAR HOOP TO ENSURE A NICE EVEN GAP

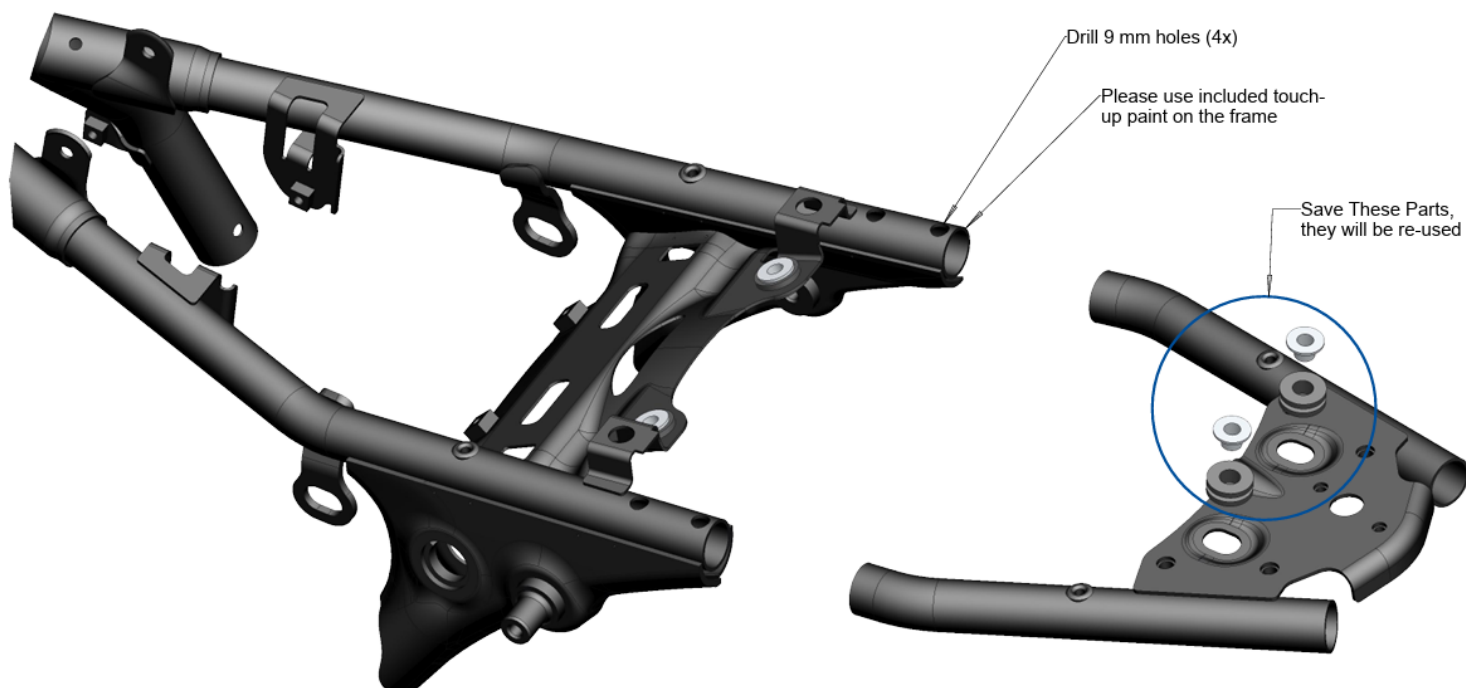



Name	CORTADO_INSTALLATION
Date	12-11-22
Scale	0.400

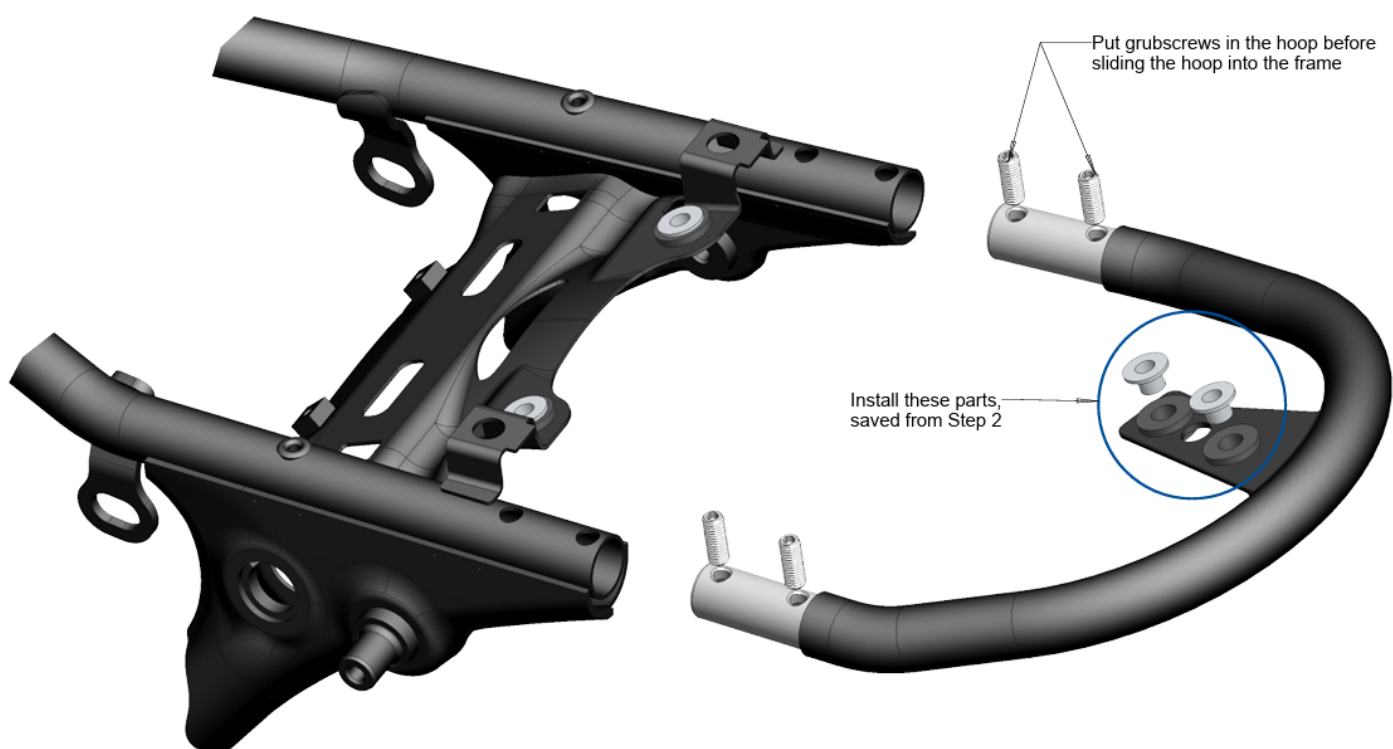

STEP 3: SLIDE IN NEW HOOP AND FIX IN PLACE WITH THE 4 GRUBSCREWS. INSTALL GROMMETS AND TOPHATS

STEP 4: MOUNT NEW FENDER WITH 4 SCREWS AND 4 NUTS M6

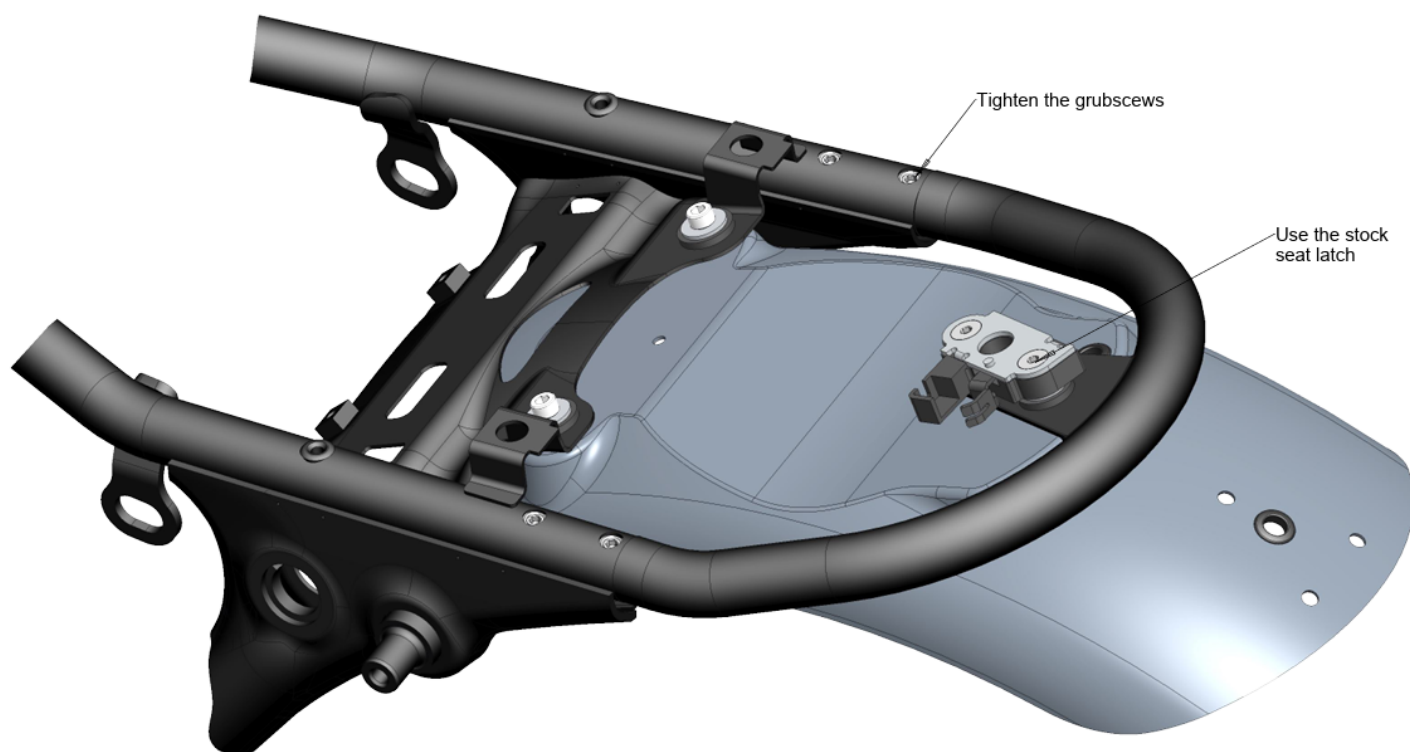

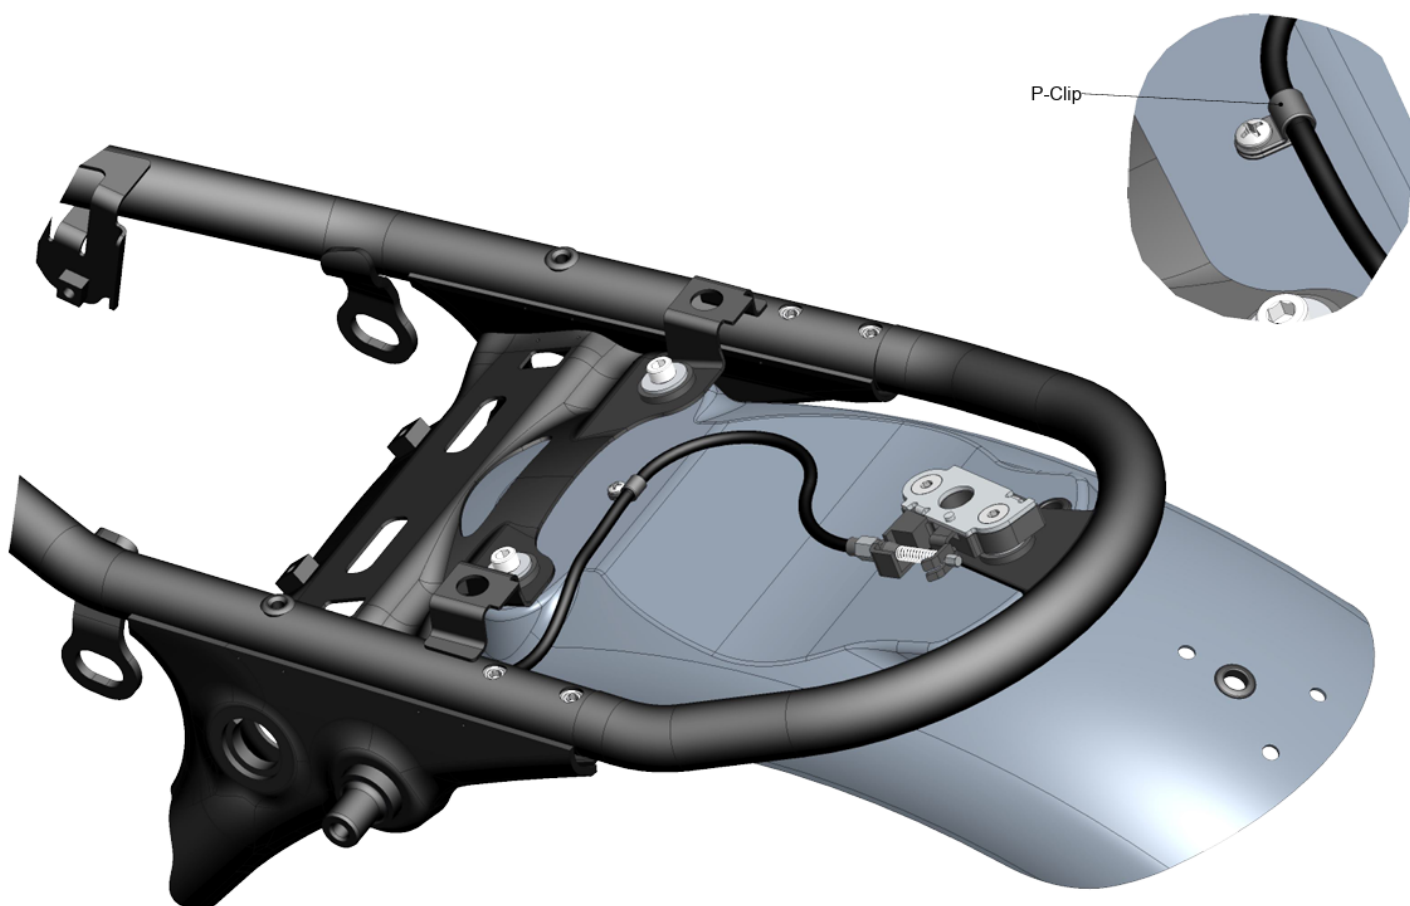

STEP 5: RE-INSTALL SEATLOCK CABLE AND HOLD IN PLACE WITH P-CLIP, SCREW M4 X 12, WASHER AND LOCKNUT

STEP 6: INSTALL TAILLIGHT AND WIRING LOOM ADAPTOR

